

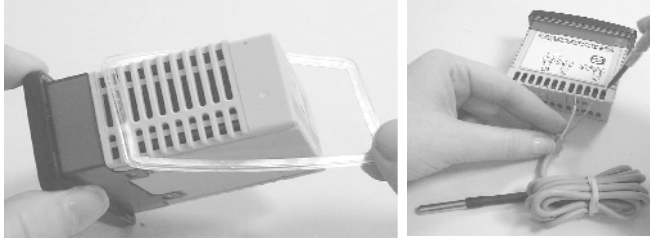


**Installation**

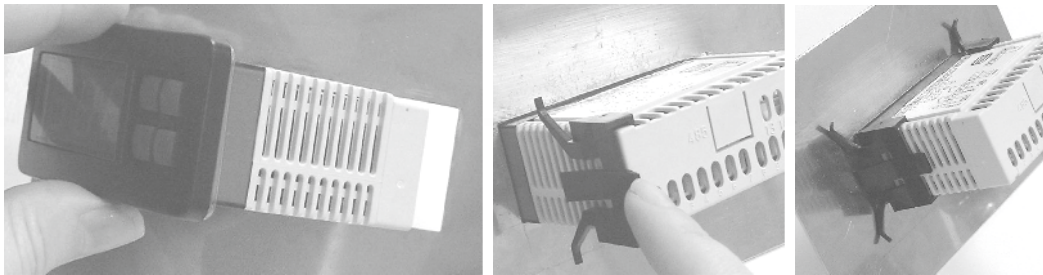


Measures for Drill to Embed

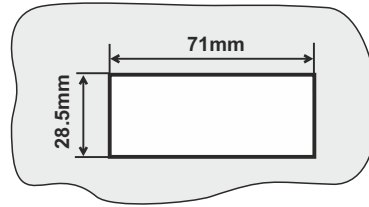

**ASSEMBLY NOTE:** Before making any electrical connections, ensure that the control is disconnected from the power supply. Any manipulation of the control is to be performed only by qualified personnel.

**Electrical Drawing**

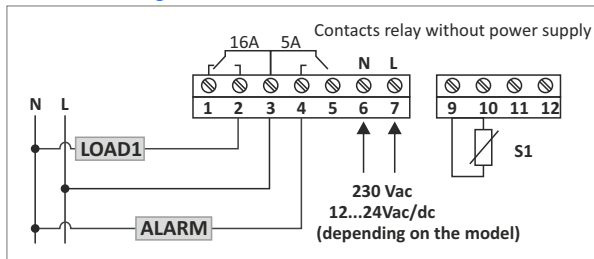

**Guarantee Conditions**

This appliance has a three-years guarantee limited to replacement of defective parts. Transports not included. We will not accept any responsibility for damage caused to the appliance by poor handling. The guarantee does not include:  
- Appliances with a damaged, effaced or altered series number.  
- Appliances which have not been connected or used following the instructions that accompany it.  
- Appliances which have been altered without the prior consent of the manufacturer.  
- Appliances damaged by blows of liquid spills or gaseous emissions.  
For the rest of general conditions visit our web.

**VERY IMPORTANT:**

Before opening the box, to access the connection, make sure the voltage switch. This controller is not a safety device, or can be used as such, it is the responsibility incorporate adequate protection to every type of installation (**homologated**) installer. The probe cable must be as far away as possible from other electrical conductors. Its maximum recommended by current regulation length should not exceed 3 meters. Embedded control device mounting, and connection via fixed pipe. Reserved the right of modify without prior notice.

**Sonder Regulación, S.A.**

Avda. La Llana, 93  
08191 RUBÍ  
(Barcelona) Spain  
[www.sonder.es](http://www.sonder.es)



Cód: 5421V2 - ING - FEB19

**Operation**

- When the appliance is switched on, the display will show "--", "RL" "--" & the temperature detected by the sensor. Press  $\blacktriangle$  or  $\blacktriangledown$  and the setpoint temperature value appears blinking.
- To change the setpoint press  $\blacktriangle$   $\blacktriangledown$  while blinking, to increase or decrease the desired temperature. The temperature is memorized after 3 seg. of not playing the keys.

**Factory Settings**

Function ...	Description	Adjusted to	Scale
-	Temperature setpoint	4,0°C	-40 to +140°C
dIF...	Temperature differential (hysteresis)	1,0°C	0,3 to 9°C
HSE...	High setpoint	99°C	-40 to +140°C
LSE...	Low setpoint	-40°C	-40 to +140°C
doF...	Minimum time for off	2 minutes	0 to 15 min
C-H...	Control type	rE	rE $\otimes$ /cA $\otimes$ /Fr $\otimes$
CAL...	Sensor calibration	0°C	-9,0°C to +9,0°C
dit...	Defrost timer	24 Hours	1 to 168H
dEt...	Defrost stop time	0 minutes	0 to 99 min
tPP...	Time to acces to Prog. Parameters	5 seconds	3 to 40 Sec.
PAS...	Parameter access code	0 Deactivated	0 to 99
LAL...	Low alarm temperature	-30°C	-40 to +140°C
HAL...	High alarm temperature	130°C	-40 to +140°C
dSA...	Alarm on delay	10 minutes	0 to 120 min
rtF...	Relay Operation for ALP/ES	50%	0% to 100%

The factory settings are those considered to be the most common for normal use of installations. If they are right for your purposes, your thermostat is ready to control and regulate your installation. If you should need any other settings please read this manual carefully.

- Manual DEFROST: Press **OK** for 10 seconds. The "dEt" duration cycles starts during wich "dEF" is shown on the display.
- Automatic DEFROST: performed every number of hours indicated in the "dit" parameter, lasting the time set in the "dEt" parameter.
- TO CANCEL ALL TYPES OF DEFROST, program the "dEt" to 0.

**Description of Parameters**

- **Temperature setpoint relay 1 (-)**: the set temperature of regulation of the R1 (Value limited by the parameters HSE-LSE)
- **Differential (dIF)**: Temperature values between energizing and releasing.
- **Low setpoint (LSE) and High setpoint (HSE)**: The temperature limits within which the setpoint can be adjusted and set.
- **Minimum off time (doF)**: Delay time applied when the compressor stops and which prevents the compressor restarting even if conditions for this are met. This delay is also applied after switching on the thermostat to protect the compressor in the event of a power outage.

**Control type (C-H):**

"rE" ( $\otimes$ ) type: The relay disconnects when the temperature falls to the setpoint and will connect when it rises to the setpoint plus differential.

"cA" ( $\otimes$ ) type: it disconnects when the setpoint is reached and will connect when the temperature falls to setpoint minus differential.

"Fr" ( $\otimes$ ) type: like rE and 2<sup>nd</sup> relay activates only for defrost. Display shows alarms LAL & HAL without activates 2<sup>nd</sup> relay.

- **Sensor calibration (CAL)**: This function enables you to change the displayed temperature.

- **Defrost timer (dit)**: Interval between the start of two successive defrosts expressed in hours.

- **Time-out defrost finish (dEt)**: After this time has elapsed (in minutes) defrost finishes. Zero indicates defrost disabled. "dEF" appears on the display during defrost.

- **Time of acces to programming of parameters (tPP)**: it is the time that should be pressing the key PRG. to enter in the programming of parameters, either to modify them or to visualize their values. (Time expressed in seconds)

- **Parameters access code**: Factory setting zero (disabled). Enter parameter programming by pressing and holding down **PRG** for 5 seconds, if the code is other than zero, enter as follows:

A.- "PAS" is briefly displayed and then the message "- 0 -"; Use the up or down arrows to select the previously programmed parameters access code.

B.- Press **OK**: If the selected number is the correct one, "- " appears. If the selected number is incorrect the thermostat will not allow access to programming and "----" appears.

- **Low alarm limit (LAL)**: A temperature belows this setting will activate 2<sup>nd</sup> relay (only for rE & cA control type). Display shows **AL** & temperature detected by probe.

- **High alarm limit (HAL)**: A temperature above this setting will activate 2<sup>nd</sup> relay (only for rE & cA control type). Display shows **AL** & temperature detected by probe.

- **Alarm on delay (dSA)**: Delay time applied when an alarm situation occurs and until the 2<sup>nd</sup> relay is activated.

- **Relay operation in the case of ALP / ES alarms (rtF)**: When the control detects ALP / ES it enters a 15-minute cycle that turns the relay on and off. With this parameter you will adjust the % of time that the relay will be active (0% = relay always OFF / 40% = relay 6 minutes ON & 9 minutes OFF / 100% = relay always ON).

**Parameters Programming**

- Press **PRG** during the time settled down in the parameter tPP (of factory 5 s.) & "dIF" appear in the screen. Release the key.
- pressing **OK** their current value will appear blinking.
- While value is blinking, press  $\blacktriangle$  or  $\blacktriangledown$  to change the desired value. Press **OK** to store it in memory. The designation of the parameter being programmed reappears.
- Press  $\blacktriangle$  to scroll forward to the next parameter. Repeat Nº 3.
- Press **PRG** to exit the parameters "- -" appears and then the current temperature detected by the sensor. After 1 minute without pressing any key, the thermostat leaves programming of parameters.

**Relay Display**

- State of Application relay. Fixed in screen when is ON & flashing while is in doF time, waiting to activate the relay
- State of alarm relay. Fixed in screen when relaly is ON

**ERROR Indicators**

"ES" Probe Error: Probe is disconnected or its wires are cut.  
"ALP" Required temperature beyond limits (HSE & LSE limits).

**Reset settings to factory defaults**

- Disconnect the control power and reconnect, wait until see on the screen the temperature reading.
- Press **OK** until see on the display "- -" (approx. 40 seconds).
- The settings return to the factory settings if you has the password disabled ("- 0 -").

**Technical Specifications**

Power Supply EC 60:..... 230Vac +10%, -15% 50/60Hz.  
Power Supply EC 100:..... 12...24Vac/dc 50/60Hz.  
Probe :..... PTC 2000, without polarity, IP65 from -40 to +140°C.  
Resolution:..... 0,1°C.  
Maximum cable section to connect:..... 1,5mm<sup>2</sup>.  
Relay 1 SPDT (potentials free contacts):..... 16(7)A 250V~.  
Relay 2 SPDT (potentials free contacts):..... 5A 250V~.  
Environment:..... Tmin. 0°C, Tmax. 45°C, %H.R. 20 ... 85%.  
Storage temperature:..... maximum 50°C.  
External box protection grade:..... IP65.  
Pollution degree:..... 2.  
Action type According EN 60730:..... 1.B.